

SCHEDULE 3

Classification and marking of aircraft and dealer certification
Article 6(5)(b) and (6)

PART 2

Conditions in aircraft dealer's certificate

1. The operator of the aircraft must be the registered owner of the aircraft and the holder of an aircraft dealer's certificate granted under this Order.
2. The aircraft may fly only for the purpose of—
 - (a) testing the aircraft;
 - (b) demonstrating the aircraft with a view to the sale of that aircraft or of other similar aircraft;
 - (c) proceeding to or from a place at which the aircraft is to be tested or demonstrated as aforesaid, or overhauled, repaired or modified;
 - (d) delivering the aircraft to a person who has agreed to buy, lease or sell it; or
 - (e) proceeding to or from a place for the purpose of storage.
3. Without prejudice to article 86 the operator of the aircraft must be satisfied before the aircraft takes off that the aircraft is in every way fit for the intended flight.
4. The aircraft may fly only within the United Kingdom.