

---

WELSH STATUTORY INSTRUMENTS

---

**2011 No. 38 (W.13)**

**CLEAN AIR, WALES**

**The Smoke Control Areas (Exempted  
Fireplaces) (Wales) Order 2011**

<i>Made</i>	- - - -	<i>11 January 2011</i>
<i>Laid before the National Assembly for Wales</i>	- -	<i>13 January 2011</i>
<i>Coming into force</i>	- -	<i>4 February 2011</i>

The Welsh Ministers in exercise of the powers conferred upon the Secretary of State by section 21 of the Clean Air Act 1993<sup>(1)</sup> and now vested in the Welsh Ministers<sup>(2)</sup>, and being satisfied that the classes of fireplace exempted by this Order can be used for burning fuel other than authorised fuels without producing any smoke or a substantial quantity of smoke, hereby make the following Order:

**Title, commencement and application**

1.—(1) The title of this Order is the Smoke Control Areas (Exempted Fireplaces) (Wales) Order 2011 and it comes into force on 4 February 2011.

(2) This Order applies in relation to Wales.

**Classes of fireplaces exempted from section 20 of the Clean Air Act 1993**

2. The classes of fireplaces described in the Schedule are, subject to the conditions listed, exempted from the provisions of section 20 of the Clean Air Act 1993 (which prohibits smoke emissions in smoke control areas).

**Revocation**

3. The Smoke Control Areas (Exempted Fireplaces) (Wales) Order 2009 ([S.I. 2009/3224](#)) ([W.278](#)) is revoked.

---

(1) [1993 c. 11](#).

(2) The relevant powers of the Secretary of State were transferred to the National Assembly for Wales by article 2 of, and Schedule 1 to, the National Assembly for Wales (Transfer of Functions) Order 1999 ([S.I. 1999/672](#)) and thereafter transferred to the Welsh Ministers by section 162 of, and paragraph 30 of Schedule 11 to, the Government of Wales Act 2006 ([c. 32](#)).

---

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

---

11 January 2011

*Jane Davidson*  
Minister for Environment, Sustainability and  
Housing, one of the Welsh Ministers

SCHEDULE

Article 2

CLASSES OF FIREPLACE WHICH ARE EXEMPT

<i>Classes of Fireplace</i>	<i>Conditions</i>
18i and 60i stoves.  Manufactured by Jetmaster Fires Limited; Unit 2 Peacock Trading Estate, Goodwood Road, Eastleigh, Hampshire, SO50 4NT.	<p>1. The fireplace must be installed, maintained and operated in accordance with the installation and use instruction manual reference: “Part No 106870 Issue No. 1” dated February 2010 and supplementary instruction manual reference: “Part No 106872 Issue No. 1” dated May 2010.</p> <p>The appliance will be fitted with a mechanical stop to prevent closure of the air control beyond the 40% open position when sold into smoke control areas.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Aarrow Signature 5 SC; Aarrow Ecoburn 5 SC; Hamlet Solution 5 SC; Villager Espirit 5 SC.  Manufactured by Arada Limited; The Fire Works, Millwey Industrial Estate, Axminster, Devon, EX13 5HU.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “Rev 02” dated April 2010.</p> <p>All the appliances will be fitted with a mechanical stop to prevent closure of the air control beyond 20mm from the closed position and 50 mm beyond the fully open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Arimax 300: Fitted with Biojet Burner 300 (kW); Arimax 400: Fitted with Biojet Burner 400 (kW); Arimax 500: Fitted with Biojet Burner 500 (kW).  Manufactured by Artierm Oy; Kimmo Kantalainen; PO Box 59; Fin — 43101; Saarijärvi, Finland.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “INSTALLATION AND OPERATION MANUAL Arimax Bio 120-3000 kW” dated 30 March 2010.</p> <p>2. No fuel is to be used other than 6—8mm wood pellets with a moisture content less than 10%<sup>(1)</sup>.</p>
Barbas ECO 40, 5 kW wood burning roomheater.  Manufactured by Interfocos BV; Hallenstraat 17,NL-5531AB, BLADEL, Netherlands.	<p>1. The fireplace must be installed, maintained and operated in accordance with the ECO 40 instruction manual, document Version 01-327332 dated October 2009.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Barbas Unilux — 3 40, 5kW wood burning insert.	<p>1. The fireplace must be installed, maintained and operated in accordance with the</p>
<p>(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.</p>	

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Interfocos BV; Hallenstraat 17, NL - 5531 AB, BLADEL, Netherlands.	Unilux — 3 40 instruction manual, document Version 01 — 326587 dated August 2009.
The Binder Wood Fired Boiler models RRK 22 — 49 (49 kW output).	<p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) Mitterdorfer Strasse 5, A-8572 Barnbach, Austria.	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
The Binder Wood Fired Boiler models RRK 80 — 175 (75 — 149 kW output) with cyclone models ZA 80 — 175.	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) Mitterdorfer Strasse 5, A-8572 Barnbach, Austria.	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
The Binder Wood Fired Boiler model RRK 130 - 250 (185 — 230 kW output) 200-350 (250—300kW output) 400-600 (350—500 kW output) 640-850 (650—840kW output) with cyclone (model type ZA).	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) Mitterdorfer Strasse 5, A-8572 Barnbach, Austria.	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
The Binder Wood Fired Boiler model RRK 1000 (1200 kW output) with multi-cyclone (model MZA).	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) Mitterdorfer Strasse 5, A-8572 Barnbach, Austria.	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's instructions entitled "Binder Equipment Installation, Commissioning and Maintenance" dated 17 May 2005, reference WEL-BinderManual rev0.doc, revision 0.</p>
The Binder Wood Fired Boiler model RRK 1200-1650 with Binder model MZA multi-cyclone and automatic ignition.	<p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's and Wood Energy Limited's Operating instructions for Binder appliances</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) of Austria.	referenced: “2009 July Binder O&M revision 8.doc Operation and Maintenance Manual, revision 8”, dated 15 July 2009.  2. No fuel is to be used other than wood pellets or wood chips <sup>(1)</sup> .
The Binder Wood Fired Boiler model RRK 1800-2300 with Binder model MZA multi-cyclone and automatic ignition.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s and Wood Energy Limited’s Operating instructions for Binder appliances referenced: “2009 July Binder O&M revision 8.doc Operation and Maintenance Manual, revision 8”, dated 15 July 2009.
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) of Austria.	2. No fuel is to be used other than wood pellets or wood chips <sup>(1)</sup> .
The Binder Wood Fired Boiler model RRK 2500-3000 with Binder model MZA multi-cyclone and automatic ignition.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s and Wood Energy Limited’s Operating instructions for Binder appliances referenced: “2009 July Binder O&M revision 8.doc Operation and Maintenance Manual, revision 8”, dated 15 July 2009.
Manufactured by Binder Gesellschaft mit beschränkter Haftung (GmbH) of Austria.	2. No fuel is to be used other than wood pellets or wood chips <sup>(1)</sup> .
The Biomatic 220 and 250 fitted with Zyκλοvent 220-250 cyclone separator.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated April 2005, reference Bedienun-gsanleitung Englisch v2.0 doc.
Manufactured by HERZ Armaturen Ges.m.b.H, Geschäftsbereich HERZ, Feuerungstechnik, A-8272 Sebersdorf 138, Austria.	2. No fuel is to be used other than wood chips, wood pellets, or planed wood shavings <sup>(1)</sup> .
The Biomatic 300, 350, 400 and 500 fitted with Zyκλοvent 300-500 cyclone separator.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated April 2005, reference Bedienun-gsanleitung Englisch v2.0 doc.
Manufactured by HERZ Armaturen Ges.m.b.H, Geschäftsbereich HERZ, Feuerungstechnik, A-8272 Sebersdorf 138, Austria.	2. No fuel is to be used other than wood chips, wood pellets, or wood shavings <sup>(1)</sup> .
Carron Stove.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual reference “91-62351” dated July 2009.
Manufactured by Jig UK Limited, Hurlingham Business Park, Fulbeck Heath, Grantham, Lincolnshire, NG32 3HL.	2. No fuel is to be used other than dry and split wood logs of a maximum length of 23cm <sup>(1)</sup> .

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Charnwood Cove 1SR.  Manufactured by A.J. Wells and Sons Limited; Bishops Way, Newport, Isle of Wight, PO30 5WS.	<p>1. The fireplace must be installed, maintained and operated in accordance with the installation and use instruction manual reference “COVE1SR01.-10 Issue A”.</p> <p>An adjustment of the air control such that the minimum closure of the air control is equivalent to that found with the control pushed in 15mm from the fully open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Charnwood Tor.  Manufactured by A.J. Wells and Sons Limited; Bishops Way, Newport, Isle of Wight, PO30 5WS.	<p>1. The fireplace must be installed, maintained and operated in accordance with the installation and use instruction manual reference “Tor 02.10 Issue A”.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Classic model 25, 35, 40, 49 and 60 wood pellet boilers.  Distributed by Wood Energy Ltd; Pinkworthy Barn, Oakford, Devon, EX16 9EU.  Manufactured by Hargassner Gesellschaft mit beschränkter Haftung (GmbH), Gunderding 8, A-4952, Weng, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s installation manual for the Classic Pellet Boilers reference “No. 22, Pellet Boilers, Type Classic 25, 31, 35, 40, 49, 60, reference BA Classic 25L-60L Nr 21 0508”.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
The Clearview Pioneer 400, Solution 400 and Pioneer Oven wood burning stoves manufactured by Clearview Stoves, More Works, Bishops Castle, Shropshire, SY9 5HH.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions entitled “Operating Instructions Clearview Vision/Vision Inset/Pioneer &amp; Solution” dated 1 July 2006, reference V1/42, stamped and signed “Smoke Control”.</p> <p>2. No fuel is to be used other than air-dried wood logs<sup>(1)</sup>.</p>
Contura 510, 520T, 550, 550A, 550W, 560T, 560K, 570, 580, 585, 590, Contura T, all manufactured by NIBE AB Box 134, 285 23 Markaryd, Sweden.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s installation instructions IAV SE/EX 0726-6 611821 Lighting instruction BAV SA/EX 0717-2 611820.</p> <p>A permanent stop must be in place on the air inlet to prevent closure beyond a minimum air open position.</p> <p>2. No fuel is to be used other than untreated dry wood with less than 20% moisture<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Contura 580W.  Manufactured by NIBE AB Box 134, 285 23 Markaryd, Sweden.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's installation instructions IAV SE/EX 0740-1 511911.</p> <p>A permanent stop must be in place on the air inlet to prevent closure beyond a minimum air open position.</p> <p>2. No fuel is to be used other than untreated dry wood with less than 20% moisture<sup>(1)</sup>.</p>
Cove 2 SR.  Manufactured by A.J. Wells and Son Ltd. Of Bishops Way, Newport, Isle of Wight, PO30 5WS.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual references "Cove2SR 07.09 IssB" dated July 2009.</p> <p>A permanent stop must be in place on air control to prevent closure beyond 14mm from the fully closed position.</p> <p>2. No fuel is to be used other than dry and split wood logs of a maximum length of 23cm<sup>(1)</sup>.</p>
CTC Ecoflex 15 and 20.  Manufactured by Enertech AB, Box 313, S-341 26 Ljungby, Sweden.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 20 February 2007, reference 161 505 27 06/1.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
Dimplex SE Selbourne 5.  Distributed by Dimplex; Millbrook House, Grange Drive, Hedge End, Southampton, Hampshire, SO30 2DF.  Manufactured by ESSE Engineering Ltd; Ouzledale Foundry, Long Ing, Barnoldswick, Lancashire, BB18 6BN.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "SE Selbourne 5 Issue 1" dated August 2009.</p> <p>All appliances will be fitted with a mechanical stop to prevent closure beyond the 50% open position when sold into smoke control areas.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
The Dovre 250 (model DV-250).  Manufactured by Dovre NV, Nijverheidsstraat 18, BE-2381 Weelde, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions, reference "PM250 Issue 1".</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond the 75% open position.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>The Dunsley Yorkshire Stove.</p> <p>Manufactured by Dunsley Heat Limited Bridge Mills, Huddersfield Road, Holmfirth, Yorkshire HD9 3TW.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 5 August 1998, reference A/22160 as amended by those dated 4 December 2004, reference D13.</p> <p>2. No fuel is to be used other than—</p> <p>Untreated dry wood<sup>(1)</sup>;</p> <p>Peat or peat briquettes with, in either case, less than 25% moisture;</p> <p>Union Coal Briketts, manufactured by Rheinbraun AG of Germany comprising lignite compressed into briquettes of approx. 15cm in length with square ends and with a sulphur content not exceeding 1% of the total weight;</p> <p>CPL Wildfire, manufactured by Coal Products Ltd., Immingham, which comprise bituminous coal with a volatile content of 32—36% (as to approx. 96% of the total weight) and a cold cure resin binder (as to the remaining weight) are manufactured from those constituents by a process involving roll pressing, have an average weight of either 80—90 grams or 160—170 grams, and have a sulphur content not exceeding 1.8% of the total weight.</p>
<p>The Dunsley Yorkshire Multifuel Stove.</p> <p>Manufactured by Dunsley Heat Limited Bridge Mills, Huddersfield Road, Holmfirth, Yorkshire HD9 3TW.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 5 August 1998, reference A/22160 as amended by those dated 4 December 2004, reference D13.</p> <p>2. No fuel is to be used other than—</p> <p>Untreated dry wood<sup>(1)</sup>;</p> <p>Peat or peat briquettes with, in either case, less than 25% moisture;</p> <p>Union Coal Briketts, manufactured by Rheinbraun AG of Germany comprising lignite compressed into briquettes of approx. 15cm in length with square ends and with a sulphur content not exceeding 1% of the total weight;</p> <p>CPL Wildfire, manufactured by Coal Products Ltd., Immingham, which comprise bituminous coal with a volatile content of 32—36% (as to approx. 96% of the total weight) and a cold cure resin binder (as to the remaining weight) are manufactured from those constituents by</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.



**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>The Dunsley Yorkshire Multifuel Stove and Boiler.</p> <p>Manufactured by Dunsley Heat Limited Bridge Mills, Huddersfield Road, Holmfirth, Yorkshire HD9 3TW.</p>	<p>a process involving roll pressing, have an average weight of either 80—90 grams or 160—170 grams, and have a sulphur content not exceeding 1.8% of the total weight.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 5 August 1998, reference A/22160 as amended by those dated 4 October 2004, reference GHD/DUN4B/1.</p> <p>2. No fuel is to be used other than—</p> <p>Untreated dry wood<sup>(1)</sup>;</p> <p>Peat or peat briquettes with, in either case, less than 25% moisture;</p> <p>Union Coal Briketts, manufactured by Rheinbraun AG of Germany comprising lignite compressed into briquettes of approx. 15cm in length with square ends and with a sulphur content not exceeding 1% of the total weight;</p> <p>CPL Wildfire, manufactured by Coal Products Ltd., Immingham, which comprise bituminous coal with a volatile content of 32—36% (as to approx. 96% of the total weight) and a cold cure resin binder (as to the remaining weight) are manufactured from those constituents by a process involving roll pressing, have an average weight of either 80—90 grams or 160—170 grams, and have a sulphur content not exceeding 1.8% of the total weight.</p>
<p>The Dunsley Yorkshire Woodburning Stove.</p> <p>Manufactured by Dunsley Heat Limited Bridge Mills, Huddersfield Road, Holmfirth, Yorkshire HD9 3TW.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 4 December 2004, reference D13W.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
<p>The Dunsley Yorkshire Woodburning Stove and Boiler.</p> <p>Manufactured by Dunsley Heat Limited Bridge Mills, Huddersfield Road, Holmfirth, Yorkshire HD9 3TW.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 4 December 2004, reference D13W together with the manufacturer's instructions dated 4 October 2004, reference GHD/DUN4B/1.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Earlswood.  Manufactured by ACR Heat Products Limited; Unit One Weston Works, Weston Lane, Tyseley, Birmingham, B11 3RP.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “EW1MF technical manual” dated February 2009.</p> <p>When the primary air control is in the closed position, it remains permanently open by 5mm and is prevented from closing fully by a screw.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Eccostove.  Manufactured by Landy Vent; Foster House, 2 Redditch Road, Studley, Warwickshire, B80 7AX.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “02/10” dated 10 February 2010.</p> <p>The fitting of a system that prevents the closure of the secondary air flaps to be less than 4mm (3 Turns) open position should be implemented.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
En-tech model ENP 10, 15, 18, 25 and 35 boilers.  Manufactured by En-tech Energietechnikproduktion, Gesellschaft mit beschränkter Haftung (GmbH), Gewerbezone 3, A-9300 St Veit, Glan-Hunnenbrunn, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s installation manual dated November 2009, reference IMENP 10-35 November 2009 for the Firefox pellet boiler.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
En-tech model PK15 and 25 boilers.  Manufactured by En-tech Energietechnik- produktion, Gesellschaft mit beschränkter Haftung (GmbH), Gewerbezone 3, A-9300 St Veit, Glan-Hunnenbrunn, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s installation manual dated November 2009, reference IMPK PK 15/25 11/2009 EN for the Firefox pellet boiler.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
En-tech model PK45 boilers.  Manufactured by En-tech Energietechnikproduktion, Gesellschaft mit beschränkter Haftung (GmbH), Gewerbezone 3, A-9300 St Veit, Glan-Hunnenbrunn, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s installation manual dated November 2009, reference IMPK PK 45 11/2009 EN for the Firefox pellet boiler.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
100 SE Smoke Exempt woodburning stove.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual dated February 2009, reference 100 SE Issue 1.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preserved or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by ESSE Engineering Ltd., Ouzledale Foundry, Long Ing, Barnoldswick, Lancashire, BB18 6BN	<b>2.</b> No fuel is to be used other than untreated dry wood with a maximum moisture content of 20% maximum length of 200 mm and maximum width or diameter of 120 mm <sup>(1)</sup> .
125 SE.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual references “Esse 125SE Issue 1” dated Awst 2009.
Manufactured by ESSE Engineering Ltd; Ouzledale Foundry, Long Ing, Barnoldswick, Lancashire, BB18 6BN.	All appliances will be fitted with a mechanical stop to prevent closure beyond the 50% open position when sold into smoke control areas. <b>2.</b> No fuel is to be used other than wood logs <sup>(1)</sup> .
Esse 1622 inset stove.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the installation and operation manual reference “1622/Integra INSET revision c” dated July 2010.
Manufactured by ESSE Engineering Ltd; Ouzledale Foundry, Long Ing, Barnoldswick, Lancashire, BB18 6BN.	All appliances used in smoke control areas must be fitted with a mechanical stop to fix secondary air control fully open. <b>2.</b> No fuel is to be used other than dry wood logs <sup>(1)</sup> .
Evotherm P50, P100, P120, P150, P170, P200 pellet boilers.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions “Operating manual” reference Version 1/2010/Rev. 4.21.
Manufactured by Evotherm, Heiztechnik Vertriebs Gesellschaft mit beschränkter Haftung (GmbH), Seeleiten 24, AT 5120, St Pantaleon, Austria.	<b>2.</b> No fuel is to be used other than wood pellets <sup>(1)</sup> .
The Extraflame:	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 5 March 2007, reference 004275101 011.
Babyfiamma, Bella and Bella Lux, Clementina Comfort Maxi, Contessa, Divina, Divina Plus and Divina Steel, Duchessa and Duchessa Steel, Ecologica, Esmeralda and Esmeralda Crystal, Falò 1CP, Falò 2CP and Falò 1XP, Isabella, Karolina, Preziosa, all of which are manufactured by Extraflame S.p.a in Montecchio Precalcino (Vicenza), Italy.	<b>2.</b> No fuel is to be used other than wood pellets <sup>(1)</sup> .
The Extraflame Comfort Mini.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 2 October 2006, reference 004275115 REV 005.
Manufactured by Extraflame S.p.a in Montecchio Precalcino (Vicenza), Italy.	

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
The Extraflame Idro.  Manufactured by Extraflame S.p.a in Montecchio Precalcino (Vicenza), Italy.	<p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 28 August 2006, reference 004275128 REV 002.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
The Extraflame Lucrezia Idro and Lucrezia Steel.  Manufactured by Extraflame S.p.a in Montecchio Precalcino (Vicenza), Italy.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 12 July 2006, reference 004275110 REV 011.</p> <p>2. No fuel shall be used other than wood pellets<sup>(1)</sup>.</p>
Firefox 5CB (4.9kW); Vega 100CB (4.9kW); Sirius 405CB (4.9kW); Flame 5CB (4.9kW).  Manufactured by Percy Doughty & Co; Imperial Point, Express Trading Estate, Stonehill Road, Farnworth, Bolton, BL4 9TN.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "FFXCBA" dated January 2010.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Fireline FXi 5kW; Fireline FPi 5kW; Fireline FX5; Fireline FP5.  Manufactured by Charlton and Jenrick Limited; G1-G2 Halesfield 5, Telford, Shropshire, TF7 4QJ.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "Issue 03" dated March 10.</p> <p>The fitting of a system that prevents the closure of the secondary air control beyond the 3.5mm open position should be implemented.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
The Firematic 25, 50, 90 and 150 manufactured by HERZ Armaturen Ges.m.b.H, Geschäftsbereich HERZ, Feuerungstechnik, A-8272 Sebersdorf 138, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated June 2005, reference "Bedienun-gsanleitung Firematic V 1.1 ENG doc".</p> <p>2. No fuel is to be used other than chipped wood, wood pellets, or planed wood shavings<sup>(1)</sup>.</p>
Firematic 45 and 60.  Manufactured by HERZ Armaturen Ges.m.b.H. Geschäftsbereich HERZ Feuerungstechnik, A-8272, Sebersdorf 138, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with Instruction manual references "05.007 Operating Instructions – FM (1Ph) 20 35 45 60 v2.3" dated "Awst 2009".</p>
(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.	

<i>Classes of Fireplace</i>	<i>Conditions</i>
Flatford 6 (7kW); Petworth 6 (7kW); Barrington 6 (7kW); Hampstead 6 (7kW); Alpine 6 (7kW) also sold as: Sunbeam 6, Dakota 6, Providence 6; Chelsea 6 (7kW) also sold as: Wellington 6, Guernsey 6, Belgravia 6.  Manufactured by Chesneys Limited; 194—200 Battersea Park Road, London, SW1 14ND.	<p><b>2.</b> No fuel is to be used other than wood pellets conforming to ÖNORM M7135 with diameter of 6mm or wood chips up to a maximum size of 50mm and maximum water content 35%<sup>(1)</sup>.</p> <p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the Chesneys 6 series instruction manual references “CH6K-V4” dated 7 December 2009.</p> <p>The appliance must be fitted with a mechanical stop to prevent closure of the air control beyond the 10mm open position.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Flatford 4 (4.6kW); Hampstead 4 (4.6kW); Alpine 4 (4.6kW) also sold as: Sunbeam 4, Dakota 4, Providence 4; Pacific 4 (4.6kW) also sold as: Milan 4, Murano 4, Apollo 4; Chelsea 4 (4.6kW) also sold as Wellington 4, Guernsey 4, Belgravia 4.  Manufactured by Chesneys Limited; 194—200 Battersea Park Road, London, SW1 14ND.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the Chesneys 4 series instruction manual references “CH4K-V4” dated 7 December 2009.</p> <p>The appliance must be fitted with a mechanical stop to prevent closure of the air control beyond the 34mm open position.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Franco Belge Model 134 08 11 Savoy EA (8kW output) wood burning stove.  Manufactured by Franco Belge, Staub Fonderie SARL, Rue Orphée Variscotte, 59660, Merville, France.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the Savoy EA Technical Manual, document reference 1290-1, reviewed 9 July 2009.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Fröling Lambdamat commercial wood chip boiler models 500,750 and 1000.  Manufactured by Fröling Heizkessel-und Behälterbau Ges.m.b.H., Industriestraße 12, A-4710 Grieskirchen, Austria.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the “Lambdamat communal Operating and Installation Manual” reference B 069 01 04 of February 2004.</p> <p><b>2.</b> No fuel is to be used other than wood chips<sup>(1)</sup>.</p>
The Fröling Turbomatic 28, 35, 48 and 55.  Manufactured by Fröling Heizkessel-und Behälterbau Ges.m.b.H., Industriestraße 12, A-4710 Grieskirchen, Austria.	<p><b>1.</b> The fireplace must be installed in accordance with the manufacturer’s installation instructions dated November 2003, reference M 060 01 03.</p> <p>The fireplace must be maintained and operated in accordance with the manufacturer’s</p>

**(1)** The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
	instructions dated August 2002, reference 99229a.
The Fröling Turbomatic 85, 100 and 110.  Manufactured by Fröling Heizkessel-und Behälterbau Ges.m.b.H., Industriestraße 12, A-4710 Grieskirchen, Austria.	<p>2. No fuel is to be used other than wood chips with less than 35% moisture content that meet ÖNORM (a) M 7133 : 1998 size class G30 or wood pellets of 6mm diameter and a moisture content below 10%<sup>(1)</sup>.</p> <p>1. The fireplace must be installed in accordance with the manufacturer's installation instructions dated November 2003, reference M 060 01 03.</p> <p>The fireplace must be maintained and operated in accordance with the manufacturer's instructions dated August 2002, reference 99229a.</p> <p>2. No fuel is to be used other than wood chips with less than 35% moisture content that meet ÖNORM (a) M 7133: 1998 size class G30 or G50, wood pellets of 6mm diameter and a moisture content below 10%<sup>(1)</sup>.</p>
The Fröling Turbomat 150 and 220.  Manufactured by Fröling Heizkessel-und Behälterbau Ges.m.b.H., Industriestraße 12, A-4710 Grieskirchen, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated August 2003, reference BO310003.</p> <p>2. No fuel is to be used other than wood pellets, or wood chips<sup>(1)</sup>.</p>
The Fröling Turbomat 320 and 500.  Manufactured by Fröling Heizkessel-und Behälterbau Ges.m.b.H., Industriestraße 12, A-4710 Grieskirchen, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated November 2004, reference B0340004.</p> <p>2. No fuel is to be used other than wood pellets, or wood chips<sup>(1)</sup>.</p>
Fröling P4 8, 15, 20, 25, 32, 38, 48 and 60 Pellet Boilers .  Manufactured by Fröling Heizkessel-und Behälterbau Ges.m.b.H., Industriestraße 12, A-4710 Grieskirchen, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual reference "BO430408_en" dated July 2009.</p> <p>2. No fuel is to be used other than wood pellets with a diameter of 6mm<sup>(1)</sup>.</p>
The Gilles HPK-RA 13 kW, 15 kW, 20 kW, 25 kW, 30 kW, 35 kW, 40 kW, 45 kW, 49 kW, 60 kW, 70 kW, 75 kW, 85 kW, 95 kW, 100 kW, 120 kW, and 145 kW, all manufactured by GILLES Energie-und Umwelttechnik GmbH, Koaserbauer Str. 16 A-4810 Gmunden, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated January 2007, reference Gilles/0-145/1.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>The Gilles HPK USK 150 kW, 180 kW, 240 kW and 300 kW.</p> <p>Manufactured by GILLES Energie-und Umwelttechnik GmbH, Koaserbauer Str. 16 A-4810 Gmunden, Austria.</p>	<p>2. No fuel is to be used other than wood pellets, or wood chips<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated January 2007, reference Gilles/150-300/1.</p> <p>2. No fuel is to be used other than wood pellets, or wood chips<sup>(1)</sup>.</p>
<p>The Gilles HPK USK 360 kW manufactured by GILLES Energie-und Umwelttechnik GmbH, Koaserbauer Str. 16 A-4810 Gmunden, Austria.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions dated January 2008, reference Gilles 360/1.</p> <p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p>
<p>The Gilles UTSK 450 kW, 550 kW, 700 kW, 900 kW, 1200 kW, and 1600 kW Boilers.</p> <p>Manufactured by GILLES Energie-und Umwelttechnik GmbH, Koaserbauer Str. 16 A-4810 Gmunden, Austria.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions dated January 2008, reference Gilles 360/1.</p> <p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p>
<p>Guntamatic Biocom and Powercorn 50 and 75.</p> <p>Manufactured by GUNTAMATIC Heiztechnik GmbH A-4722 PEUERBACH Bruck 7, Austria.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual reference "GUN/BIO/OP-/VI/0709" dated 29 July 09.</p> <p>2. No fuel is to be used other than wood pellets with a diameter of 6mm and a length of between 10 and 30 mm.(1).</p>
<p>Guntamatic Powerchip 50 and 75.</p> <p>Manufactured by Guntamatic Heiztechnik GmbH A-4722 PEUERBACH Bruck 7, Austria.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual references "GUN/POW-/OP-/VI/0709" dated 29 July 09.</p> <p>2. No fuel is to be used other than wood pellets with a diameter of 6mm and a length of between 10 and 30 mm<sup>(1)</sup>.</p>
<p>Guntamatic Biocom and Powercorn 100.</p> <p>Manufactured by GUNTAMATIC Heiztechnik GmbH A-4722 PEUERBACH Bruck 7, Austria.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual references "GUN/BIO/OP-/VI/0709" dated 29 July 09.</p> <p>2. No fuel is to be used other than wood pellets with a diameter of 6mm and a length of between 10 and 30 mm, or wood chip less than 35% moisture content and meeting ÖNORM M 7133:1998 size class G30<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
Guntamatic Powerchip 100.  Manufactured by GUNTAMATIC Heiztechnik GmbH A-4722 PEUERBACH Bruck 7, Austria.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual references "GUN/POW/-OP/VI/0709" dated 29 July 09.</p> <p>2. No fuel is to be used other than wood pellets with a diameter of 6mm and a length of between 10 and 30 mm, or wood chip less than 35% moisture content and meeting ÖNORM M 7133:1998 size class G30<sup>(1)</sup>.</p>
Hamont CATfire 350 USZI pellet boiler fitted with CATfire 300 cyclone.  Manufactured by Hamont Contracting and Trading, spol. s.r.o., Sedlitzte 227, postal code 739 36, district Frýdek-Místek, Y Czech Republic.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instruction reference "Operating Manual for Boilers CATfire 150—500kW" effective from 1 January 2008.</p> <p>2. No fuel is to be used other than wood pellets with a diameter of 6mm and a maximum length of 30 mm<sup>(1)</sup>.</p>
Handöl 31, Handöl 31A, Handöl 32, Handöl 32A, Handöl 33T, Handöl 34T, Handöl 35T, Varde Ovne Look 1, Varde Ovne Look 2, Varde Ovne Look 2 , all manufactured by NIBE AB Box 134, 285 23 Markaryd, Sweden.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's installation instructions IAV SE/EX 0811-4 511941 Lighting instructions BAV SE/EX H30 511942.</p> <p>A permanent stop must be in place on the air inlet to prevent closure beyond a minimum air open position.</p> <p>2. No fuel is to be used other than untreated dry wood with less than 20% moisture<sup>(1)</sup>.</p>
Handöl 50, Handöl 51, Handöl 52, Handöl 52T, Handöl 53, Handöl 54, Handöl 54T, Handöl 51L, Varde Ovne S1, Varde Ovne S2, Varde Ovne S3, all manufactured by NIBE AB Box 134, 285 23 Markaryd, Sweden.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's installation instructions IAV SE/EX 0737-4 511866 Lighting instructions BAV SE/EX 0717-1 511865.</p> <p>A permanent stop must be in place on the air inlet to prevent closure beyond a minimum air open position.</p> <p>2. No fuel is to be used other than untreated dry wood with less than 20% moisture<sup>(1)</sup>.</p>
Harrie Leenders Cylon; Harrie Leenders Doran 160; Harrie Leenders Doran 190; Harrie Leenders Fuga S; Harrie Leenders Fuga eL; Harrie Leenders Stor; Harrie Leenders Signa.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference "Supplementary Instructions Amended June 2010".</p>
Distributed by Robeys Limited; Goods Road, Belper, Derbyshire, DE56 1UU.	<p>All appliances will be fitted with a mechanical stop to prevent closure of the air slide beyond</p>
<p>(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preserved or coatings.</p>	



<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Harrie Leenders, Industrieweg 25, 5688 DP Oirschot, Netherlands.	the 15mm open position when sold into smoke control areas.
HDG Compact models 25/35 (25 kW, 35 kW) wood chip and pellet boilers.	2. No fuel is to be used other than wood logs <sup>(1)</sup> .
Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Compact 25/35 with HDG Hydronic reference "HDG Compact Version V01" of April 2009.
Manufactured by HDG Bavaria, Gesellschaft mit beschränkter Haftung (GmbH) Siemensstrasse 22, 84323 Massing, Germany.	2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
HDG Compact models 50/65 (50 kW, 65 kW) wood chip and pellet boilers.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Compact 50/65 with HDG Hydronic reference "HDG Compact Version V03" of April 2009.
Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.	2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
Manufactured by HDG Bavaria, Gesellschaft mit beschränkter Haftung (GmbH) Siemensstrasse 22, 84323 Massing, Germany.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Compact 80 with HDG Hydronic reference "HDG Compact Version V03" of April 2009.
HDG Compact model 80 (80 kW) wood chip and pellet boiler.	2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Compact 100/150/200 reference "HDG Compact 100-200 Version V1" of July 2008.
Manufactured by HDG Bavaria, Gesellschaft mit beschränkter Haftung (GmbH) Siemensstrasse 22, 84323 Massing, Germany.	2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
HDG Compact model 100 (100 kW) wood chip and pellet boiler; HDG Compact model 150, 200 (150 kW, 200 kW) wood chip and pellet boiler with model HDG 3113 cyclone.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Compact 100/150/200 reference "HDG Compact 100-200 Version V1" of July 2008.
Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.	2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
Manufactured by HDG Bavaria, Gesellschaft mit beschränkter Haftung (GmbH) Siemensstrasse 22, 84323 Massing, Germany.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Euro 30/40/50 with Lambda Control 1
HDG Euro models 30, 40 and 50 (30 kW, 40 kW and 50 kW) wood log boilers.	
Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.	

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>Manufactured by HDG Bavaria, Gesellschaft mit beschränkter Haftung (GmbH) Siemensstrasse 22, 84323 Massing, Germany.</p>	<p>reference “HDG Euro V3.0 with HDG Lambda Control 1 Version V1” of June 2008.</p> <p>2. No fuel is to be used other than split wood logs of 500 mm length and maximum edge length of 120 mm and a residual moisture content of 20%<sup>(1)</sup>.</p>
<p>HDG Navaro models 20, 25 and 30 (20 kW, 25 kW and 30 kW) wood log boilers.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s operating instructions for the HDG Navora 20/25/30 with Lambda Control 1 reference “HDG Navora 20/25/30 with HDG Lambda Control 1 Version V2” of June 2008.</p>
<p>Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.</p>	<p>2. No fuel is to be used other than split wood logs of 500 mm length and maximum edge length of 120 mm and a residual moisture content of 20%<sup>(1)</sup>.</p>
<p>Manufactured by HDG Bavaria, Gesellschaft mit beschränkter Haftung (GmbH) Siemensstrasse 22, 84323 Massing, Germany.</p>	<p>2. No fuel is to be used other than split wood logs of 500 mm length and maximum edge length of 120 mm and a residual moisture content of 20%<sup>(1)</sup>.</p>
<p>Highlander 5 Clean Burn manufactured by Dunsley Heat Limited, Bridge Mills, Huddersfield, Holmfirth, West Yorkshire, HD9 3TW.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual references “Highlander. The Dunsley-Enviroburn-5. Clean Burn Stove Installation and operating instructions, D12-01-09, D060-01-09, D13-01-09, D12-12-08.”</p> <p>2. No fuel is to be used other than wood logs conforming to BS EN 13240:2001<sup>(1)</sup>.</p>
<p>The Hoval AgroLyt 20, 25, 35, 45 and 50.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s technical information and installation instructions dated January 2006, reference 4 205 194/00 and 4 205 193/00 dated June 2006.</p>
<p>Manufactured by Hoval AG, Austrasse 70, 9490 Vaduz, Liechtenstein.</p>	<p>2. No fuel is to be used other than wood logs with less than 20% moisture<sup>(1)</sup>.</p>
<p>Hoval BioLyt Wood Pellet Boiler.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references 'Hoval Operating Instructions, wood pellet heating boiler BioLyt (50,70,120,140,160) dated 3 July 2008 and “Technical information assembly instructions” dated 3 October 2009.</p>
<p>Manufactured by Hoval Limited, Northgate, Newark, Nottinghamshire, NG24 1JN.</p>	<p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
The Hoval BioLyt 50 Wood Pellet Boiler (49kW thermal output) manufactured by Hoval AG, Austrasse 70, 9490 Vaduz, Liechtenstein.	<ol style="list-style-type: none"> <li>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's technical information and installation instructions dated October 2005, reference 4 204794/00 and operating instructions dated January 2006, reference 4 204 793/01.</li> <li>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</li> </ol>
The Hoval BioLyt 50 and 70 models. Manufactured by Hoval AG, Austrasse 70, 9490 Vaduz, Liechtenstein.	<ol style="list-style-type: none"> <li>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's technical information and installation instructions dated June 2007, reference 4 204 794/01 and 4 204 793/02.</li> <li>2. No fuel is to be used other than 6mm diameter wood pellets<sup>(1)</sup>.</li> </ol>
Hoval Forester UFS 180, 240, 300, 360, 450, 550, 700, 900, 1200, 1600. Distributed by Hoval Limited; Northgate, Newark, Nottinghamshire, NG24 1JN. Manufactured by Schmid AG, Wood firing Systems, PO Box 42, CH-8360 Eschlikon, Switzerland.	<ol style="list-style-type: none"> <li>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "Forester UFS" dated November 2009.</li> <li>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</li> </ol>
The Hoval STU 150, 200, 250, 300, 350, 425 and 500. Manufactured by Hoval UK Ltd, Northgate, Newark-on-Trent, Nottinghamshire, NG24 1JN.	<ol style="list-style-type: none"> <li>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's technical information and installation instructions dated November 2007, reference STUman/01, or dated June 2008, reference STU/man/01/1.</li> <li>2. No fuel is to be used other than 6mm diameter wood pellets<sup>(1)</sup>.</li> </ol>
The Hoval STU 600, 800 and 1000. Manufactured by Hoval UK Ltd, Northgate, Newark-on-Trent, Nottinghamshire, NG24 1JN.	<ol style="list-style-type: none"> <li>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions dated June 2008, reference STU/man/01/1.</li> <li>2. No fuel is to be used other than 6mm diameter wood pellets<sup>(1)</sup>.</li> </ol>
HSV 50 + WTH 45, 49 or 55; HSV 80 + WTH 70 or 80; HSV 100 + WTH 100. Distributed by Wood Energy Ltd; Wood Energy Ltd, Pinkworthy Barn, Oakford, Devon, EX16 9EU.	<ol style="list-style-type: none"> <li>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's installation manual version 44 for Wood Chip and Pellet Stoves, Type HSV 30-100. Reference "BA HSV30-100 RA/RAP V44 0608".</li> </ol>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Hargassner Gesellschaft mit beschränkter Haftung (GmbH), Gunderding 8, A-4952, Weng, Austria.	<p>2. No fuel is to be used other than wood chips or wood pellets<sup>(1)</sup>.</p>
The Huntingdon 25 clear door (model number 7057) and Huntingdon 25 tracery door (model number 7058).	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instruction manual, reference "PM 249 Issue 1".</p>
Manufactured by Stovax Limited, Falcon Road, Sowerton Industrial Estate, Exeter, Devon EX2 7LF.	<p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond the 75% open position.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
The Hwam Beethoven, Hwam Beethoven H, Hwam Mozart, Hwam Ravel, Hwam Vivaldi, Hwam 30 (4.5 kW nominal thermal output) fitted with mechanism to prevent closure of the air wash/secondary air control.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated November 2006, reference IN1 141 Ed B.</p>
Manufactured by HWAM Heat Design AS Nydamsvej 53, 8362 Hørning, Denmark.	<p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
Instyle 400; Instyle 550.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual referenced "Instruction_manual_Instyle_1209_ENG".</p>
Manufactured by Dik Geurts Haardkachels BV; Industrieweg Oost 11, 6662 NE Elst (Gld), The Netherlands.	<p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
KÖB Pyromat-DYN (KPM-DYN) 45, 65, 85.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "ID 103689-L English" dated 01.01.2005 and instruction manual "ID: 103708-G English".</p>
Manufactured by Viessman Limited; Hortonwood 30, Telford, Shropshire, TF1 7YP.	<p>2. No fuel is to be used other than wood logs (up to 0.5m) and off cuts of natural timber, wood chips and pellets<sup>(1)</sup>.</p>
KÖB Pyromat-ECO (KPM-ECO) models 35, 45, 55, 65, 75, 85.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "ID 104646-D English" dated 01 January 2005 and instruction manual "ID: 104642-B English".</p>
Manufactured by Viessman Limited; Hortonwood 30, Telford, Shropshire, TF1 7YP.	<p>2. No fuel is to be used other than wood logs (up to 0.5m) and off cuts of natural timber<sup>(1)</sup>.</p>
KÖB Pyromat-ECO (KPM-ECO) models 61, 81, 101, 151.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references "ID 104646-H</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preserved preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Viessman Limited; Hortonwood 30, Telford, Shropshire, TF1 7YP.	English” dated 01 January 2005 and instruction manual “ID: 104642-B English”.  2. No fuel is to be used other than wood logs (up to 1.0m) and off cuts of natural timber <sup>(1)</sup> .
KÖB Pyrot (KRT) models 100, 150, 220, 300, 400, 540.  Manufactured by Viessman Limited; Hortonwood 30, Telford, Shropshire, TF1 7YP.	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references “ID 104654-H English” dated 01 January 2005 and instruction manual “ID: 106811-H English”.  2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
KÖB Pyrtec (KPT) models 390, 530, 720, 950, 1250. Exhaust gas multi-cyclone de-dusters attached.  Manufactured by Viessman Limited; Hortonwood 30, Telford, Shropshire, TF1 7YP.	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references “ID 104661-F English” dated 01 January 2005 and instruction manual “ID: 105174-F English”. Appliances must be fitted with multi-cyclone dedusters.  2. No fuel is to be used other than wood chips or wood pellets <sup>(1)</sup> .
Kooga Cleanburn Stove.  Manufactured by Percy Doughty & Co; Imperial Point, Express Trading Estate, Stonehill Road, Farnworth, Bolton, BL4 9TN.	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references “KCB 04/10A” dated April 2010.  2. No fuel is to be used other than wood logs <sup>(1)</sup> .
The KWB TDS Powerfire 130, 240 and 300.  Manufactured by KWB — Kraft und Wärme aus Biomasse Gesellschaft mit Beschränkter Haftung (GmbH) of Industriestrasse 235, A-8321 St. Margarethen an der Raab, Austria.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 14 May 2008, reference BA TDS-05.2008.  2. No fuel is to be used other than wood pellets or wood chips <sup>(1)</sup> .
The KWB TDS Powerfire 150.  Manufactured by KWB — Kraft und Wärme aus Biomasse Gesellschaft mit Beschränkter Haftung (GmbH) of Industriestrasse 235, A-8321 St. Margarethen an der Raab, Austria.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated August 2005, reference BA TDS — 0805.  2. No fuel is to be used other than wood pellets or wood chips <sup>(1)</sup> .
Lin-ka H 1500 Hot Water Boiler fitted with either a mono-cyclone (type LIN-KA 2000) or a multi-cyclone (type LIN-KA 3×2).	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “LIN-KA H 1500 Hot Water Manual/Ver. 2005/Rev. 1.10” dated 27 January 2010.

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
Distributed by Manco Energy Limited; Market Weighton Road, North Newbald, East Yorkshire, YO43 4SP.	<b>2.</b> No fuel is to be used other than wood pellets of maximum 8mm diameter <sup>(1)</sup> .
Manufactured by LIN-KA Maskinfabrik A/S, Nylandsvej 38, DK-6940 Lem St. Denmark.	
The Little Thurlow wood burning stove.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 30 June 2007, issue No. 3.
Manufactured by Town and Country Fires Pickering, North Yorkshire.	<b>2.</b> No fuel is to be used other than seasoned logs of less than 20% moisture and of a maximum length of 350mm <sup>(1)</sup> .
Little Wenlock Classic Wood Fuel Stove.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions dated 19 December 2008, reference N00471AXX Rev 001 DP 081219.
Manufactured by Aga, Station Road, Ketley, Telford, Shropshire, TF1 5AQ.	<b>2.</b> No fuel is to be used other than dry and split wood logs of a maximum length of 25cm and a maximum diameter of 10cm <sup>(1)</sup> .
Lotus Liva 1, Liva 2, Liva 3 and Liva 4G stoves.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual "Mounting and User Instructions Lotus-Liva series Stoves" Version 4 dated January 2010.
Manufactured by Lotus Heating Systems A/S; Agertoften 6, 5550 Langeskov, Denmark.	<b>2.</b> No fuel is to be used other than wood logs <sup>(1)</sup> .
Lotus Sola, Sola S, Sola M and Sola MST stoves.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual "Mounting and User Instructions Lotus-Sola series Stoves" Version 2 dated January 2010.
Manufactured by Lotus Heating Systems A/S; Agertoften 6, 5550 Langeskov, Denmark.	<b>2.</b> No fuel is to be used other than wood logs <sup>(1)</sup> .
The Løvenholm.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's installation and operation manual version 07/08.
Manufactured by Hunter Stoves Ltd, Unit 6, Old Mill Industrial Estate, Stoke Canon, Exeter, Devon EX5 4RJ.	<b>2.</b> No fuel is to be used other than untreated wood with less than 20% moisture content <sup>(1)</sup> .
The Løvenholm, Løvenholm Traditional, European, and Pedestal Stoves.	<b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions "Løvenholm

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Hunter Stoves Ltd, Unit 6, Old Mill Industrial Estate, Stoke Canon, Exeter, Devon EX5 4RJ.	Multifuel stove installation and operating manual” version 06/09.  2. No fuel is to be used other than untreated wood with less than 20% moisture content <sup>(1)</sup> .
The Mescoli PB50, PB35, PB28.  Manufactured by MESCOLI CALDAIE S.r.l. Caldaie-Termocucine, Via del Commercio, 285 4 1058 Vignola, (MO) Italy.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction and installation manual reference “SY315EVO P,C,B-COMBIFIRE 2 PB28/35/50 BOILERS” Edition 1.7 Dated January 2006.  2. No fuel is to be used other than wood pellets following ÖNORM M7 135 or DIN plus (DIN 51731) <sup>(1)</sup> .
Micromet MEG 7.5 (also known as the Sirius 750); Micromet MEG 4.5 (also known as the Sirius 450).	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references “Micromet Solid Fuel Stoves Manual (24)” dated 16 June 2010.  2. No fuel is to be used other than dry wood logs <sup>(1)</sup> .
Manufactured by Micromet; 125 Bridge St, Birkenhead, Merseyside, CH41 1BD.	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “1295-3” dated 17 November 2009.  The appliance must be fitted with a mechanical stop to prevent closure of the secondary air control beyond the 25% open position.  2. No fuel is to be used other than wood logs <sup>(1)</sup> .
Monfort MK2 stove.  Manufactured by Franco Belge Staub; Staub Fonderie, Rue Orphee Bariscotte, BP 73, 59660 Merville, France.	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references “Ø- Collection” dated 01 February 2010 and instruction manual “72000400” dated 01 February 2010. Applies to units manufactured after 01 February 2010.  2. No fuel is to be used other than wood logs <sup>(1)</sup> .
Morsø-Ø4.  Manufactured by MORSØ UK Limited; Unit 7 — io centre, Valley Drive, Swift Valley, Rugby, Warwickshire, CV21 1TW.	1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 10 January 2008, reference 72146800.  2. No fuel is to be used other than wood logs with less than 20% moisture <sup>(1)</sup> .
The Morsø 1400 series consisting of the 1412 and 1442 models.  Manufactured by Morsø Jernstøberi A/S DK-7900 Nykøbing, Mors, Denmark.	

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>The Morsø 3100 series consisting of the 3112 and 3142 models.</p> <p>Manufactured by Morsø Jernstøberi A/S DK-7900 Nykøbing, Mors, Denmark.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 4 February 2008, reference 72311200.</p> <p>2. No fuel shall be used other than wood logs with less than 20% moisture<sup>(1)</sup>.</p>
<p>The Morsø 6140 series consisting of the 6140 and 6148 models.</p> <p>Manufactured by Morsø Jernstøberi A/S DK-7900 Nykøbing, Mors, Denmark.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 4 September 2007, reference 72610400.</p> <p>2. No fuel is to be used other than wood logs with less than 20% moisture<sup>(1)</sup>.</p>
<p>Morsø Model 7600 including Model 7642, 7644 and 7648.</p> <p>Manufactured by MORSØ UK Limited; Unit 7 — io centre, Valley Drive, Swift Valley, Rugby, Warwickshire, CV21 1TW.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instructions for installation and use 7600 reference "72762200" dated 14 July 2010.</p> <p>The air control on UK models has been altered such that this equates to an increased minimum open position. Reference drawings Morsø 7600-137, 7600-138, 7600-139, 7600-140 and 7600-141.</p> <p>2. No fuel is to be used other than wood logs with less than 20% moisture<sup>(1)</sup>.</p>
<p>The Morsø Owl 3410, 3420 and 3440 for wood burning.</p> <p>Manufactured by Morsø Jernstøberi A/S DK-7900 Nykøbing, Mors, Denmark.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 1 January 2000, reference 72345600.</p> <p>2. No fuel is to be used other than untreated dry wood which has been split, stacked and air dried; or air dried wood briquettes<sup>(1)</sup>.</p>
<p>Nestor Martin C23 multifuel stove (7.7 kW); Nestor Martin C33 multifuel stove (9.2kW); Nestor Martin D33 multifuel stove (8kW).</p> <p>Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operation instructions reference "IN 1213 Edition B" and dated June 2010.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
<p>The Nestor Martin Harmony Multi-Fuel Stove H13 (5 kW nominal thermal output) and H33 (8 kW nominal thermal output).</p> <p>Manufactured by Nestor Martin, S. A. Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated January 2007, reference IN1 116 Edition D.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.



<i>Classes of Fireplace</i>	<i>Conditions</i>
Nestor Martin “Harmony” H13 multifuel stove (5kW); Nestor Martin “Stanford” S13 multifuel stove (3.5kW).  Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.	<p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited’s operation instructions reference “IN 1116 Edition D5” and dated June 2010.</p> <p>The minimum air bleed flap must be set at a minimum of 14.5mm.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
The Nestor Martin Harmony Multi-Fuel Stove H23 (6 kW nominal thermal output).  Manufactured by Nestor Martin, S. A. Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited’s operational instructions dated November 2006, reference IN1 141 Edition B.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
Nestor Martin “Harmony” H23 (6kW) and H33 (8kW) multifuel stoves; Nestor Martin “Stanford” S23 (6kW) SP23 (6kW) S33 (8kW) and SP33 (8kW) multifuel stoves.  Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited’s operation instructions reference “IN 1116 Edition D5” and dated June 2010.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
Nestor Martin IN13 Insert multifuel stove (5 kW).  Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited’s operation instructions reference “IN 1214 edition B” and dated June 2010.</p> <p>The minimum air bleed flap must be set at a minimum of 14.5mm.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
Nestor Martin IT 13 multifuel stove (3.5kW).  Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited’s operation instructions reference “IN 1180 Edition D1” and dated June 2010.</p> <p>The minimum air bleed flap must be set at a minimum of 14.5mm.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Nestor Martin R23 multifuel stove (6kW). Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.	<p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operation instructions reference "IN 1141 Edition B" and dated November 2006.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
Nestor Martin R33 (8kW) multifuel stove. Manufactured by Nestor Martin S.A. 11 Rue de Lion, B-5660, Frasnes Les Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operation instructions reference "IN 1116 Edition D" and dated January 2007.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
The Nestor Martin Stanford Multi-Fuel Stove S13, S23 and SP23 (6 kW nominal thermal output). Manufactured by Nestor Martin, S A Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated November 2006, reference IN1 141 Edition B.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
The Nestor Martin Stanford Multi-Fuel Stove S13 (3.5 kW nominal thermal output), S33 and SP33 (8 kW nominal output). Manufactured by Nestor Martin, S. A. Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated January 2007, reference IN1 116 Edition D.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
The Nestor Martin R23 Stove (6 kW nominal thermal output). Manufactured by Nestor Martin, S. A. Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated November 2006, reference IN1 141 Edition B.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
The Nestor Martin Multi-fuel Stove IT 13 (3.5 kW nominal thermal output). Manufactured by Nestor Martin, S. A. Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.	<p>1. The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated April 2007, reference IN1 180 Edition C.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>																		
<p>The Nestor Martin Multi-fuel Stove R33 and D33 (8 kW nominal thermal output).</p> <p>Manufactured by Nestor Martin, S. A. Finuick Nv, Voie Axiale 5, B-5660 Couvin, Belgium.</p>	<p><b>2.</b> No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p> <p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with Euroheat Distributors (HBS) Limited's operational instructions dated January 2007, reference IN1 116 Edition C.</p> <p><b>2.</b> No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>																		
<p>The ÖkoFEN Pellematic PE08, PE12, PE16, PE20, PE25, PE32, PEK12, PEK16, PEK20, PEK25, PEK32, PES12, PES16, PES20, PES25, PES32, PESK12, PESK16, PESK25, and PESK32.</p> <p>Manufactured by ÖkoFEN Forschungs-und Entwicklungs Ges.m.b.H of Gewerbepark1, 4133 Niederkappel, Austria.</p>	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated February 2007, reference PE/HB/001.E.</p> <p><b>2.</b> No fuel is to be used other than wood pellets with a maximum diameter of 6mm and a maximum length of 4cm<sup>(1)</sup>.</p>																		
<p>The ÖkoFEN Pellematic PE36, PE48, PE56, PESK36, PESK48, PESK56.</p> <p>Manufactured by ÖkoFEN Forschungs-und Entwicklungs Ges.m.b.H of Gewerbepark1, 4133 Niederkappel, Austria.</p>	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated March 2008, reference PBV 2000 CMP 1.4 (V2.31).</p> <p><b>2.</b> No fuel is to be used other than wood pellets with a maximum diameter of 6mm and a maximum length of 4cm<sup>(1)</sup>.</p>																		
<p>The Orchard Ovens models: FVR Speciale 80, 100, 110, 110 × 160 and 120; TOP Superiore 100 and 120; GR 100, 120, 140, 120 × 160, 140 × 160, 140 × 180 and 180; OT 100, 120, 140, 120 × 160, 140 × 160, 140 × 180 and 180; the Valoriani Piccolo, all of which are manufactured by Valoriani of Via Caselli alla Fornace, 213 50066 Reggello, Firenze, Italy.</p>	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 25 October 2004, references:</p>																		
	<table border="1"> <thead> <tr> <th><i>Instruction</i></th> <th><i>Model</i></th> </tr> </thead> <tbody> <tr> <td>OOL inst.1</td> <td>FVR 80</td> </tr> <tr> <td>OOL inst.2</td> <td>FVR 100</td> </tr> <tr> <td>OOL inst.3</td> <td>FVR 110</td> </tr> <tr> <td>OOL inst.4</td> <td>FVR 120</td> </tr> <tr> <td>OOL inst.5</td> <td>FVR 110×160</td> </tr> <tr> <td>OOL inst.6</td> <td>TOP 100</td> </tr> <tr> <td>OOL inst.7</td> <td>TOP 120</td> </tr> <tr> <td>OOL inst.8</td> <td>GR 100 and OT 100</td> </tr> </tbody> </table>	<i>Instruction</i>	<i>Model</i>	OOL inst.1	FVR 80	OOL inst.2	FVR 100	OOL inst.3	FVR 110	OOL inst.4	FVR 120	OOL inst.5	FVR 110×160	OOL inst.6	TOP 100	OOL inst.7	TOP 120	OOL inst.8	GR 100 and OT 100
<i>Instruction</i>	<i>Model</i>																		
OOL inst.1	FVR 80																		
OOL inst.2	FVR 100																		
OOL inst.3	FVR 110																		
OOL inst.4	FVR 120																		
OOL inst.5	FVR 110×160																		
OOL inst.6	TOP 100																		
OOL inst.7	TOP 120																		
OOL inst.8	GR 100 and OT 100																		

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>	
	<i>Instruction</i>	<i>Model</i>
	OOL inst.9	GR 120 and OT 120
	OOL inst.10	GR 140 and OT 140
	OOL inst.11	GR 120×160 and OT 120×160
	OOL inst.12	GR 140×160 and OT 140×160
	OOL inst.13	GR 140×180 and OT 140×180
	OOL inst.14	GR 180 and OT 180
	OOL inst.15	Valoriani Piccolo
	<p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>	
Pelletstar 10, 20, 30, 45 and 60.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions dated November 2007, reference V2.2.</p>	
Manufactured by HERZ Armaturen Ges.m.b.H, Geschäftsbereich HERZ Feuerungstechnik, A-8272 Sebersdorf 138, Austria.	<p>2. No fuel is to be used other than wood pellets corresponding to ÖNORM M7135 of 6mm diameter<sup>(1)</sup>.</p>	
Pelletmaster PM15, 15 kW wood pellet boiler.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions for the HDG Pelletmaster 15/25 reference HDG Pelletmaster Version V1 of October 2006.</p>	
Distributed by Euroheat; Unit 2, Court Farm Business Park, Bishops Frome, Worcestershire.	<p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>	
Manufactured by HDG Bavaria Gesellschaft mit beschränkter Haftung (GmbH), Siemensstrasse 22, 84323 Massing, Germany.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's Instruction manual reference "AH/Ver3" and dated July 2010.</p>	
Pevex Bohemia 30, 40, 50 and 60 multifuel stoves.	<p>2. No fuel is to be used other than dry wood logs<sup>(1)</sup>.</p>	
Manufactured by Pevex Enterprises Limited, Unit 16, Seven Acres Business Park, Newbourne Road, Waldringfield, Nr Woodbridge, IP12 4PS.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference: "Solid Fuel Stoves Manual issued — 20/08/2009 (291) 2".</p>	
Portway Number 1.	<p>2. No fuel is to be used other than dry wood logs<sup>(1)</sup>.</p>	
Distributed by Hughes Design; 43 Harrison Rd, Adlington, Lancashire, PR7 4HN.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference: "Solid Fuel Stoves Manual issued — 20/08/2009 (291) 2".</p>	
Manufactured by BFM Europe Limited, Trentham Lakes, Stoke on Trent, Staffordshire, ST4 4TJ.	<p>The appliance must be used with a modification to the secondary air slide which inhibits closure further than the 25mm from the left position.</p>	
<p>(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.</p>		

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
	<p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Portway Number 2; Portway Number 3.</p> <p>Distributed by Hughes Design; 43 Harrison Rd, Adlington, Lancashire, PR7 4HN.</p> <p>Manufactured by BFM Europe Limited, Trentham Lakes, Stoke on Trent, Staffordshire, ST4 4TJ.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference: “Solid Fuel Stoves Manual issued — 20/08/2009 (291) 2”.</p> <p>The appliance must be used with a modification to the secondary air slide which inhibits closure further than the 20mm from the left position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Portway Inset.</p> <p>Distributed by Hughes Design; 43 Harrison Rd, Adlington, Lancashire, PR7 4HN.</p> <p>Manufactured by BFM Europe Limited, Trentham Lakes, Stoke on Trent, Staffordshire, ST4 4TJ.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference: “Solid Fuel Stoves Manual issued — 20/08/2009 (291) 2”.</p> <p>A modification of the secondary air control must be implemented such that the 20mm from left position is maintained during use. In addition the primary air control must be modified such that the minimum setting allows a bleed of air to pass through.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>The Quadra-Fire 2100 Millennium Freestanding Wood Burning Stove.</p> <p>Manufactured by Hearth &amp; Home Technologies 1445 North Highway, Colville, WA 99114, USA.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 9 October 2003, reference 250-6931B.</p> <p>2. No fuel is to be used other than dry cured untreated wood of maximum size 38.1 cm × 10.16 cm × 5.08 cm<sup>(1)</sup>.</p>
<p>The Quadra-Fire Yosemite Freestanding Wood Burning Stove.</p> <p>Manufactured by Hearth &amp; Home Technologies 1445 North Highway, Colville, WA 99114, USA.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 4 June 2003, reference 7004-187.</p> <p>2. No fuel is to be used other than dry cured untreated wood of maximum size 38.1 cm × 10.16 cm × 5.08 cm<sup>(1)</sup>.</p>
<p>The Quadra-Fire Cumberland Gap Freestanding Wood Burning Stove.</p> <p>Manufactured by Hearth &amp; Home Technologies 1445 North Highway, Colville, WA 99114, USA.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 8 July 2003, reference 7006-186.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
Rais 2:1 inset stove. Distributed by Robeys Limited; Goods Road, Belper, Derbyshire, DE56 1UU. Manufactured by Rais A/S, Industrivej 20, 9900, Frederikshavn, Denmark.	<p><b>2.</b> No fuel is to be used other than dry cured untreated wood of maximum size 43.18 cm × 10.16 cm × 5.08 cm<sup>(1)</sup>.</p> <p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “USER MANUAL Rais 2:1 Revision 2”. Dated December 2009. Part number 9106510.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Rais 700 inset stove. Distributed by Robeys Limited; Goods Road, Belper, Derbyshire, DE56 1UU. Manufactured by Rais A/S, Industrivej 20, 9900, Frederikshavn, Denmark.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “USER MANUAL Rais 700 Revision 0”. Dated 2010.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Rais Epoca, Rais Poleo 95 and Rais Poleo 106 stoves. Distributed by Robeys Limited; Goods Road, Belper, Derbyshire, DE56 1UU. Manufactured by Rais A/S, Industrivej 20, 9900, Frederikshavn, Denmark.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “USER MANUAL Rais Poleo 95 &amp; Rais Poleo 106 Rais Epoca Revision 1”. Dated December 2009. Part number 2106510.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Rais Rondo Classic and Rais Mino II stoves. Distributed by Robeys Limited; Goods Road, Belper, Derbyshire, DE56 1UU. Manufactured by Rais A/S, Industrivej 20, 9900, Frederikshavn, Denmark.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “USER MANUAL Rais Rondo &amp; Rais Mino II revision 2”. Dated March 2008. Part number 5056510.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Rais Rondo 92 and Rais Rondo 120 stoves. Distributed by Robeys Limited; Goods Road, Belper, Derbyshire, DE56 1UU. Manufactured by Rais A/S, Industrivej 20, 9900, Frederikshavn, Denmark.	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “USER MANUAL Rais Rondo 92 &amp; Rais Rondo 120 revision 2”. Dated December 2009. Part number 4076510.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Redfyre Kensal 20 Flat top (product code RF-EN20M), Redfyre Kensal 33 Flat top (product code RF-KEN33M and RF-KEN33W).	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual dated July 2008, reference PM247 issue 1, and instruction</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Redfyre Cookers, Osprey Road, Sowton Industrial Estate, Exeter, Devon, EX2 7JG.	<p>manual dated January 2009, reference PM280 issue 1.</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond the 50% open position.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
Riva 40 Cassette 4.9kW; Riva 40 Cassette — Black 4.9kW stoves.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM235 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM226 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Riva 40 Freestanding — Storm 4.9kW; Riva 40 Freestanding — Black 4.9kW; Riva 40 Avanti 4.9kW; Riva 40 Avanti Midi 4.9kW; Riva 40 Avanti Highline 4.9kW stoves.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM235 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM235 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position and the primary air control fixed to allow a bleed of air to enter the firebox from underneath the grate.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Riva 55 Cassette — Black; Riva 66 Cassette; Riva 66 Cassette — Black; Riva 66 Avanti Cassette stoves.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM235 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position and the primary air control fixed to allow a bleed of air to enter the firebox from underneath the grate.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM235 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position and the primary air control fixed to allow a bleed of air to enter the firebox from underneath the grate.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.</p>	

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Riva 55 Avanti Midi 8kW; Riva 66 Freestanding — Storm 8kW; Riva 66 Freestanding — Black 8kW stoves.  Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM226 Issue 2” dated August 2009 and smoke control kit instruction manual “PM375 Issue 2” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position and the primary air control fixed to allow a bleed of air to enter the firebox from underneath the grate.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Riva Plus Small (5kW) — Multifuel; Riva Plus Midi (6.5kW) — Multifuel; Riva Plus Medium (8 kW) — Multifuel stoves.  Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM231 Issue 3” dated June 2009 and smoke control kit instruction manual “PM402 Issue 1” dated November 2009.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 25% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Riva Studio 1 Cassette (5kW).  Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM274 Issue 2” dated October 2009 and smoke control kit instruction manual “PM400 Issue 1” dated November 2009.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 45% open position and the primary air control fixed to prevent full closure to allow a bleed of air to enter the firebox at the base of the fuel bed.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
Riva Studio 2 Cassette (8kW).  Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM274 Issue 2” dated October 2009 and smoke control kit instruction manual “PM400 Issue 1” dated November 2009.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.



**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
	<p>A permanent stop must be positioned to prevent closure of the secondary air control below the 25% open position and the primary air control fixed to prevent full closure to allow a bleed of air to enter the firebox at the base of the fuel bed.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Riva Vision Small (5kW) — Multifuel; Riva Vision Midi (6.5kW) — Multifuel.</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM278 Issue 2a” dated October 2009 and smoke control kit instruction manual “PM401 Issue 1” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Riva Vision Medium (8 kW) — Multifuel.</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM278 Issue 2a” dated October 2009 and smoke control kit instruction manual “PM401 Issue 1” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 25% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Riva Studio 1 (5kW) freestanding wood stove.</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM452 Issue 1” dated June 2010 and smoke control kit instruction manual “PM400 Issue 3” dated June 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 45% open position and the primary air control fixed to prevent full closure to allow a bleed of air to enter the firebox at the base of the fuel bed.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preserved or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>Riva Studio 2 (8kW) freestanding wood stove.</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM452 Issue 1” dated June 2010 and smoke control kit instruction manual “PM400 Issue 3” dated June 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 25% open position and the primary air control fixed to prevent full closure to allow a bleed of air to enter the firebox at the base of the fuel bed.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Rosedale SC Multifuel Stove.</p> <p>Manufactured by Town &amp; Country Fires Limited; 1 Enterprise Way, Thornton Road Industrial Estate, Pickering, North Yorkshire, YO18 7NA.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the “Rosedale Smoke Control Stove Installation and User Instructions Issue 1” dated 1 May 2010.</p> <p>The appliance must be fitted with a mechanical stop to prevent closure of the secondary air control beyond the 50% open position when sold into smoke control areas.</p> <p>2. No fuel is to be used other than wood logs with a maximum of 20% moisture<sup>(1)</sup>.</p>
<p>The Scan Anderson 4-5.</p> <p>Manufactured by Krog Iversen 7 Co., A/S DK-5492 Vissenbjerg, Denmark.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 15 November 2007, entitled “Scan Andersen 4-5”, reference 09/05-GB.</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond 20mm.</p> <p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
<p>Schmid UTSK 180, 240, 300, 360, 450, 550, 700, 900, 1200, 1600 kW.</p> <p>Manufactured by Schmid AG Woodfiring Systems, PO Box 42, CH-8380 Eschikon, Switzerland.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual “UTSK-ABC.22-AME-S-PPU” dated 25 September 2008 where ABC is model number ie. 180, 240, 300, 360, 450, 550, 700, 900, 1200, 1600.</p> <p>2. No fuel is to be used other than wood pellets or wood chips following CEN/TS 14961<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>Schmid UTSL 30, 40, 50, 65, 80, 110, 150 kW.</p> <p>Manufactured by Schmid AG Woodfiring Systems, PO Box 42, CH-8380 Eschikon, Switzerland.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual reference “Operating Manual Wooden Chips and Pellets Plant. Lignumat UTSL” dated 23 December 2004.</p> <p>2. No fuel is to be used other than wood pellets or wood chips following CEN/TS 14961<sup>(1)</sup>.</p>
<p>Schmid UTSP 180, 240, 300 kW.</p> <p>Manufactured by Schmid AG Woodfiring Systems, PO Box 42, CH-8380 Eschikon.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual “UTSK — ABC-22-AME-S-PPU” dated 25 September 2008 where ABC is model number ie. 180, 240, 300.</p> <p>2. No fuel is to be used other than wood pellets following CEN/TS 14961<sup>(1)</sup>.</p>
<p>Schmid UTSR 150, 180, 240, 300, 360, 450, 550, 700, 900 kW.</p> <p>Manufactured by Schmid AG Woodfiring Systems, PO Box 42, CH-8380 Eschikon.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual “UTSR — ABC22-AME-S-PPV” dated 25 September 2008 where ABC is model number ie. 150, 180, 240, 300, 360, 450, 550, 700, 900.</p> <p>2. No fuel is to be used other than wood pellets or wood chips following CEN/TS 14961<sup>(1)</sup>.</p>
<p>Serrano 5 Multi Fuel Stove; York Midi Multi Fuel Stove; Monterrey 6 Multi Fuel Stove.</p> <p>Manufactured by Broseley Limited; Knights Way, Battlefield Enterprise Park, Shrewsbury, Shropshire, SY1 3AB.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “09TJD” dated January 2010.</p> <p>The fitting of a system that prevents the closure of the secondary air flaps to be less than 8mm open position should be implemented.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>The Stockton 5 flat top (model number 7119) Stockton 5 Canopy (model number 7160) and Stockton 5 Midline (model number 7133).</p> <p>Manufactured by Stovax Ltd, Falcon Road, Sowton Industrial Estate, Exeter, Devon EX2 7LF.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions reference, “PM176 — issue 4”.</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond the 50% open position.</p>
<p>(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.</p>	

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>The Stockton 3 flat top (product code 7118)                      Stockton 4 flat top (product code 7101 and 7102) and Stockton 5 flat top (product code 7127)                      Stockton 5 midline (product code 7130)                      Stockton 6 flat top ( product codes 7100 and 7162)                      Stockton 6 Highline (product code 7117) and Stockton 7 flat top (product codes 7120 and 7163).</p> <p>Manufactured by Stovax Ltd., Falcon Road, Sowton Industrial Estate, Exeter, Devon EX2 7LF.</p> <p>Stockton 7 Inset Convector (product codes 7125F and 7125C).</p> <p>Manufactured by Stovax Ltd., Falcon Road, Sowton Industrial Estate, Exeter, Devon EX2 7LF.</p>	<p><b>2.</b> No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p> <p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual dated July 2008, reference “PM227 ENG Issue 2”, and instruction manual dated January 2009, reference “PM271 Issue 2”.</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond the 50% open position.</p> <p><b>2.</b> No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p> <p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual dated May 2008, reference “PM230 Issue 1”, and instruction manual dated January 2009, reference “PM281 Issue 1”.</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond the 50% open position.</p> <p><b>2.</b> No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p>
<p>Stockton Milner (4.6 kW) inset stove — smoke control version.</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p>	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM416 Issue 1” (June 2010) and smoke control kit instruction manual “PM501 Issue 1” (June 2010).</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>Tiger SuperClean.</p> <p>Distributed by Percy Doughty &amp; Co.; Imperial Point, Express Trading Estate, Stonehill Road, Farnworth, Bolton, BL4 9TN.</p> <p>Manufactured by Tiger stoves, Focus Arts &amp; Crafts Co., Industrial Area Gao Zhuangzi Village, Xin Zhuang Town, Jin Nan District, Tainjin, P. R. China 300350.</p>	<p><b>1.</b> The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “INSTALLATION AND OPERATING INSTRUCTIONS document v.148” dated April 2010.</p> <p><b>2.</b> No fuel is to be used other than wood logs<sup>(1)</sup>.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>The Twin Heat CS 150i.</p> <p>Manufactured by TWIN HEAT A/S, Nørrevangen 7, DK-9631 Gedsted, Denmark.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's operating instructions dated 17 December 2008, reference version 6.0.03.</p> <p>2. No fuel is to be used other than wood pellets of a maximum length of 30mm and diameter of 6mm and conforming to CEN/TS 14961:2005<sup>(1)</sup>.</p>
<p>The Type USV wood pellet and wood chip fired boilers, model numbers USV-15, 25, 30, 40, 50, 60, 80 and 100.</p> <p>Manufactured by KWB — Kraft und Wärme aus Biomasse Gesellschaft mit beschränkter Haftung (GmbH) of Industriestrasse 235, A-8321 St. Margarethen an der Raab, Austria.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated August 2003, reference BA-USV 0803.</p> <p>2. No fuel is to be used other than wood pellets or wood chips<sup>(1)</sup>.</p>
<p>The Type USP wood pellet fired boilers, model numbers USP-10, 15, 20, 25 and 30.</p> <p>Manufactured by KWB — Kraft und Wärme aus Biomasse Gesellschaft mit beschränkter Haftung (GmbH) of Industriestrasse 235, A-8321 St. Margarethen an der Raab, Austria.</p>	<p>1. The fireplaces must be installed, maintained and operated in accordance with the manufacturer's instructions dated 28 July 2003 reference BA-USP 0703.</p> <p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
<p>View 3 (3.8 kW) and View 5 (4.9kW) multifuel stoves; View 5 (4.9kW) wood stove.</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference "PM485 Issue 1" dated June 2010 and smoke control kit instruction manual "PM490 Issue 1" dated June 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
<p>The Westfire Uniq 15, 16 and 20 (also known as WF UNIQ 15, 16 and 20).</p> <p>Manufactured by Westfire Tømmervej 3 DK-6800 Varde, Denmark.</p>	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer's instructions dated 2007, reference WF15 — WF16 — WF20 along with supplementary instructions dated 2007, reference 01 wfuk.2207.</p> <p>A permanent stop must be in place on the secondary air inlet to prevent closure beyond 50mm.</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

*Status: This is the original version (as it was originally made). This item of legislation is currently only available in its original format.*

<i>Classes of Fireplace</i>	<i>Conditions</i>
Westfire Uniq 18; Westfire Uniq 17; Westfire Uniq 19; Westfire Uniq 23; Westfire Uniq 23 side Glass; Westfire Uniq 23 Inset.	<p>2. No fuel is to be used other than untreated dry wood<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “WESTFIRE SUPPLEMENTARY INSTRUCTIONS JUNE 2010”.</p> <p>All appliances will be fitted with a mechanical stop to prevent closure of the air slide beyond the 30mm open position when sold into smoke control areas.</p>
Distributed by Eurostove Ltd on behalf of Westfire APS; APS, Tømrerej 3, DK-6800 Varde, Denmark.	
Manufactured by Westfire APS, Tømrerej 3, DK-6800 Varde, Denmark.	<p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p>
The Windhager Bio Win 90 and 120.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated August 2008, reference 092125/00.</p>
Manufactured by Windhager Zentralheizung GmbH, Anton-Windhager-Str. 20, A-5201 Seekirchen bei Salzburg, Austria.	<p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
The Windhager Bio Win 100, 150, 210 and 260.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instruction manual dated May 2008, reference 0916197/00.</p>
Manufactured by Windhager Zentralheizung GmbH, Anton-Windhager-Str. 20, A-5201 Seerkirchen bei Salzburg, Austria.	<p>2. No fuel is to be used other than wood pellets<sup>(1)</sup>.</p>
Woodpecker 15, 25 and 45 wood pellet boilers.	<p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “Europe Issue 4” dated July 2010.</p>
Distributed by Woodpecker Energy UK; The Tithe Office, Preston Road, Abbey Manor Business Centre, Yeovil, BA20 2FJ.	<p>2. No fuel is to be used other than wood pellets conforming to CEN TS 14961<sup>(1)</sup>.</p>
Manufactured by Garranlea Renewables Ltd. of Barnard, Garranlea, NewInn, Cashel, Co.Tipperary, Ireland.	
The Wood Waste Technology Heater, models WT10 and WT15.	<p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s instructions dated 19 January 2005, reference WT10 and WT15.</p>
Manufactured by Wood Waste Technology Units 1 and 2, Drummond Road, Astonfields Industrial Estate, Stafford, Staffordshire, ST16 3HJ.	<p>2. No fuel is to be used other than hardwood and softwood offcuts, air dried medium density fibreboards and untreated and air dried wood offcuts<sup>(1)</sup>.</p>
The Wood Waste Technology Ltd. WT5.	<p>1. The fireplace must be installed, maintained and operated in accordance with the</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

<i>Classes of Fireplace</i>	<i>Conditions</i>
<p>Manufactured by Wood Waste Technology Units 1 and 2, Drummond Road, Astonfields Industrial Estate, Stafford, Staffordshire, ST16 3HJ.</p> <p>WTH 150 and WTH 200 boilers.</p> <p>Distributed by Wood Energy Ltd; Pinkworthy Barn, Oakford, Devon, EX16 9EU.</p> <p>Manufactured by Hargassner Gesellschaft mit beschränkter Haftung (GmbH), Gunderding 8, A-4952, Weng, Austria.</p> <p>Xeoos 5kW stove.</p> <p>Versions — Natur, Style, Harmony, Pur, Classic, Elegance and Stone;</p> <p>Xeoos 8kW stove Versions — Basic, Pur, Classic, Elegance Stone and Air.</p> <p>Manufactured by Specht Modulare Ofensysteme GmbH &amp; Co, KG i.V. Dipl.-Ing. Frank Werner Projektmanagement Bahnhofstr. 2 D 35116 Hatzfeld.</p> <p>Yeoman Exmoor —</p> <p>Multifuel, flat top (4.9kW); Yeoman Exmoor — Multifuel, low canopy (4.9kW); Yeoman Exe — Multifuel, flat top, 1 door (4.9kW); Yeoman Exe — Multifuel, flat top, 2 door (4.9kW); Yeoman Exe — Multifuel, low canopy, 1 door (4.9kW); Yeoman Exe — Multifuel, low canopy, 2 door (4.9kW).</p> <p>Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.</p> <p>Yeoman Devon — Multifuel, flat top, 1 door (9kW); Yeoman Devon — Multifuel, flat top, 2 door (9kW); Yeoman Devon — Multifuel, low canopy, 1 door (9kW); Yeoman Devon — Multifuel, low canopy, 2 door (9kW); Yeoman Devon — Multifuel, high canopy, 1 door (9kW); Yeoman Devon — Multifuel, high canopy, 2 door (9kW).</p>	<p>manufacturer’s instructions dated 16 February 2009, reference WT5_v2.</p> <p>2. No fuel is to be used other than medium density fibreboard and untreated wood offcuts<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s installation manual “version 91 for Large Capacity Boiler WTH 150-200. Reference BA GK V90b 0309”.</p> <p>2. No fuel is to be used other than wood chips or wood pellets<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the manufacturer’s “operating and installation instructions Xeoos 5k W/8kW model 2008” reference: “Revisions — Index 01/08 Fassung Januar 2008”.</p> <p>2. No fuel is to be used other than wood logs conforming to DIN 51731<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM184 Issue 3” dated February 2008 and smoke control kit instruction manual “PM403 Issue 1” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 60% open position and a system that prevents full closure of the primary air controls.</p> <p>2. No fuel is to be used other than wood logs<sup>(1)</sup>.</p> <p>1. The fireplace must be installed, maintained and operated in accordance with the instruction manual reference “PM184 Issue 3” dated February 2008 and smoke control kit instruction manual “PM403 Issue 1” dated January 2010.</p> <p>A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position and a system that ensures a</p>

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

<i>Classes of Fireplace</i>	<i>Conditions</i>
Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	gap of 1mm for bleed of primary air when the spin wheels are rotated to their closed positions.  2. No fuel is to be used other than wood logs <sup>(1)</sup> .
Yeoman CL3 (3.8 kW) and CL5 (4.9 kW) multifuel stoves; Yeoman CL5 (4.9 kW) wood Stove.	1. The fireplace must be installed, maintained and operated in accordance with the instruction manual references “PM489 Issue 1” dated June 2010 and smoke control kit instruction manual “PM491 Issue 1” dated 5 April 2010.  A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.  2. No fuel is to be used other than wood logs <sup>(1)</sup> .
Manufactured by Stovax Limited; Falcon Road, Sowton Industrial Estate, Exeter, Devon, EX2 7LF.	A permanent stop must be positioned to prevent closure of the secondary air control below the 50% open position.  2. No fuel is to be used other than wood logs <sup>(1)</sup> .

(1) The fuel must not contain halogenated organic compounds or heavy metals as a result of treatment with wood-preservatives or coatings.

## EXPLANATORY NOTE

*(This note is not part of the Order)*

Section 20 of the Clean Air Act 1993 (“the 1993 Act”) places a general prohibition on the emission of smoke in smoke control areas.

The Welsh Ministers may, by order made under section 21 of the 1993 Act, exempt specified classes of fireplace from the provisions of section 20, if they are satisfied that such fireplaces can be used for burning fuel other than authorised fuels without producing any smoke or a substantial quantity of smoke.

This Order applies in relation to Wales.

This Order revokes and replaces with amendments the Smoke Control Areas (Exempted Fireplaces) (Wales) Order 2009 ([S.I. 2009/3224](#)) ([W.278](#)).

Article 2 of the Order exempts the classes of fireplaces listed in the first column of the Schedule to the Order from the provisions of section 20 of the 1993 Act, subject to the conditions in the second column of that Schedule.

A regulatory impact assessment has been prepared in connection with this Order. A copy can be obtained from the Welsh Assembly Government, Cathays Park, Cardiff, CF10 3NQ.